

# M-ROCK P-Series

## FIREPLACE INSTALLATION USING P-SERIES STONE AND OUR FIREPLACE TRIM KIT



Read the instructions and become familiar with the stone.

- Watch the Installation video at [www.m-rockstone.com](http://www.m-rockstone.com)
- Ensure that you have all the parts, fasteners, and tools that you will need.
- Fireplace Surround Trim Kit is required when P-Series Stone Veneer is installed on a fireplace. Open edge / untrimmed stones should NEVER be exposed to excessive heat sources such as fireplaces, wood / pellet stoves, fire pits, etc. (Always consult and follow local building codes) Failure to follow these and other specific instructions VOID all warranties.
- We are here to help. Just call customer service 866-896-7625.

### FIREPLACE TRIM KIT

Our Fireplace Trim Kit is designed for both the look and function for that perfect finish. A 7 piece trim kit contains: 2 Base Blocks, 2 Columns, a left and right header, and a key stone. Each section of the trim kit is manufactured with metal brackets for ease of installation. The Fireplace Trim Kit is a universal size, which can be cut to fit most fireplaces. Hearth Stones are sold separately.



### SUPPLIES YOU WILL/MAY NEED:


Along with your P-Series Flats/Corners

- Starter Strip packs and a level
- Drill and appropriate driver
- Screws (1¼ min.) Galvanized or dipped in exterior coating
- Recommended 30# felt moisture barrier
- Polyurethane Construction Adhesive
- Masonry, circular, or table saw with masonry blade
- Hearth Stones

### STEP 1: TRIM KIT AND HEARTH STONES

Measure your hearth's depth and width to determine the number of hearth stones needed. Now for your Trim Kit. Start by placing the hearth stone first, next place the base block (a) and one column (b) on top of that. Mark the columns height needed and cut to size using a masonry blade. Attach both side bases and columns. Center and attach the keystone (c).

Now place the right and left headers (d) trimming to size needed.

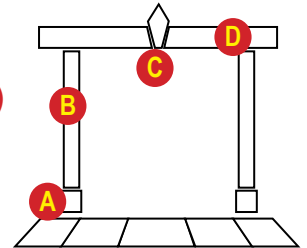

### STEP 2: APPLYING THE STONE

When inside and/or outside corners are present it is recommended that you start with inside corners first, then outside corners, then fill in between with flats. The first row locks into the Starter Strip and the stones work better from left to right. When you get to the end of the each row measure and make the appropriate cut, using the remaining piece to begin your next row when possible.

### STEP 3: FINISHING

Cutting may be necessary to finish the top row. If you have to make any cuts, do not cut the bottom section of the rail on the stone, so that it can still be locked into place. Make your cut and set the stone into place to assure the fit. Once you are confident that your fit is correct, use a quality Construction Adhesive. Apply the desired amount to the top and back section and along each vertical butt joint, ensuring that the stone is locked into place.